Sync and charge
Zune™ with your computer.

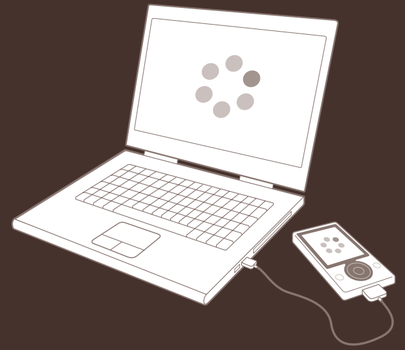

– Silicone sleeves ensure a comfortable fit while blocking external noise.

– Choose the sleeves that best fit your ears. Pull gently to remove sleeves, push gently to attach.

See the Zune Product Guide for important safety information.

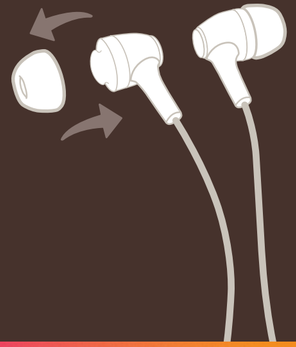

Carry Zune and your favorite accessories with convenience and style.

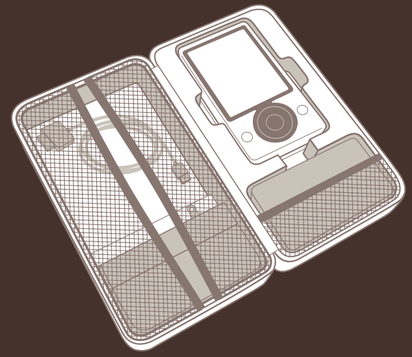

For more, see www.zune.net.

©2006 Microsoft Corporation. All rights reserved. 0806 Part No. X12-59544-03

Microsoft

zune™

Travel Pack

Start

M Fold Lines Pollock PMS Warm Gray 4 c PMS Orange 021 C

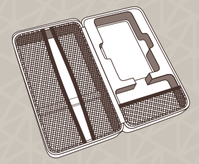

Zune Gear Bag

Zune AC Adapter

Zune Premium Earphones

Zune Sync Cable

Zune Dual Connect Remote

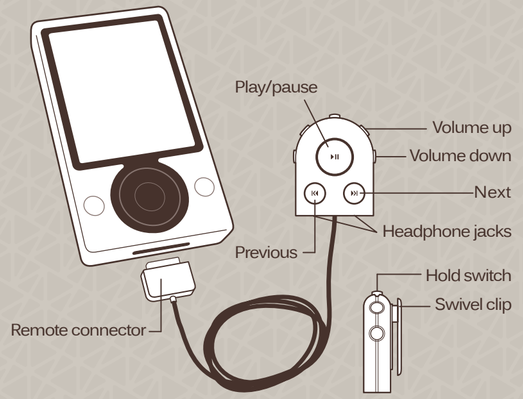

- Each of the remote's headphone jacks has its own volume control.
- The headphone jack on your Zune™ device remains active when the remote is connected, accommodating up to 3 sets of headphones.
- Using multiple sets of headphones will drain the battery more quickly.
- The remote's hold switch locks only the buttons on the remote. This means the remote's buttons can be active while the Zune device's are locked, and vice versa.
- The remote's swivel clip attaches easily to belts, straps, and clothing.

- Connect the sync cable to both the AC adapter and Zune before connecting to a power outlet.

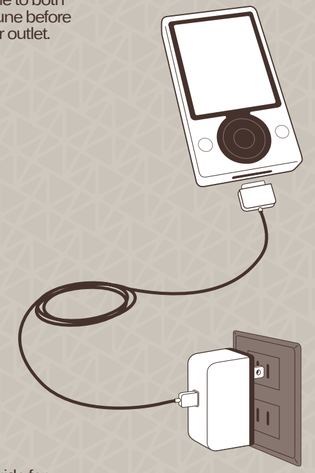

See the Zune Product Guide for important safety information.

M

Fold Lines

Pollock

PMS Warm Gray 4 c

PMS Orange 021 C

Gloss Varnish